


HOW TO CONNECT THE WIRING HARNESSES ON RECON LED TAIL LIGHTS

Prior to the installation of your RECON LED tail lights, please follow the instructions below to prevent a short circuit situation in your vehicles electrical system which will cause fuses to blow on your fuse panel.

(a) Install the function of Brake/Position light:

Please follow the directions and color of the wires (shown in Pic. 1). Connect the connector with the corresponding wire color. (black wire goes in-line with black wire)

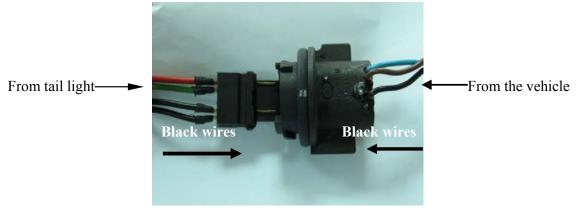

Pic. 1. The wire harness for the Brake/Running Light Function

(b) Install the function of Turn signal light:

Please follow the directions and color of the wires (shown in Pic. 2). Connect the connector with the corresponding wire color. (black wire goes in-line with black wire)



Pic. 2. The wire harness for the Turn Signal Function

Remarks: If you insert the harness in the wrong direction, the light will not function properly and can blow the fuse when tested. In this case simply replace the blown fuse and insert the harness correctly as described above in the instructions.

If you have any questions, feel free to contact us: info@reconaccessories.com - www.GoRecon.com